

Bridgemate shows "Press OK to test LCD" or Factory Test Mode

Modified on: Sat, 16 Nov, 2019 at 3:50 PM

Summary

Bridgemate II scoring device shows "Press OK to test LCD" or "Factory test mode" on screen. It does not return to normal operations mode.

Procedure


This text is part of the Bridgemate internal test mode. To exit this test mode, press the following four keys in this order on the first screen that appears after activating the Bridgemate:

- 2
- 5
- NT
- diamond

If your Bridgemate shows Factory Test mode after activation, press these four keys on this screen:



If your Bridgemate does not show this screen, but the first visible screen after activation is "Press OK to test LCD", then press these four keys on this screen:

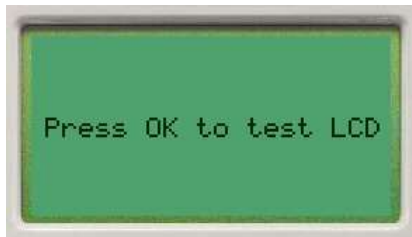

The Bridgemate will now return to normal operation mode.

Additional information

There is no additional information available for this article.

See also

No further references available for this article.

Update history

22-10-2013 - Article published

09-01-2015 - Article updated

Contact Us

- [Email Us \(http://www.bridgemate.com/contact/\)](http://www.bridgemate.com/contact/)